


Trainings ▾


Remove

Turn the keyswitch to the OFF position.


Activate the parking brake.

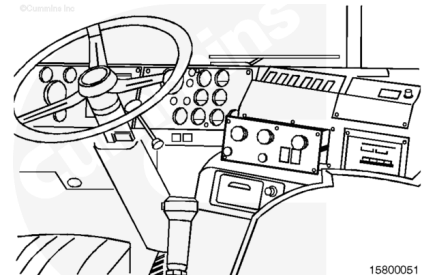

Remove the dash panel to gain access to the parking brake switch assembly.

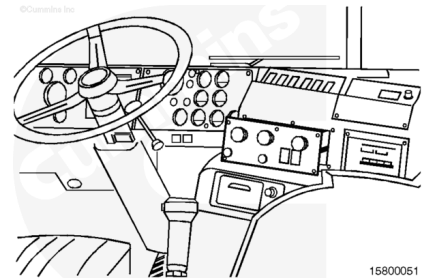


Disconnect the parking brake switch from the cab harness.

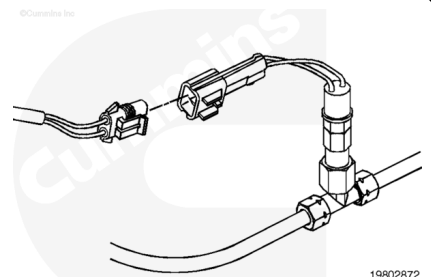

Loosen the nut securing the parking brake switch assembly into the tee fitting.


Remove the parking brake switch.

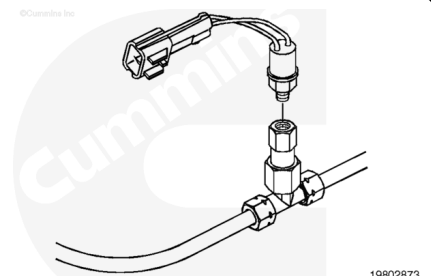


Install

Turn the keyswitch to the OFF position.


Check to make sure the parking brake line is relieved of air pressure by activating the vehicle parking brake.

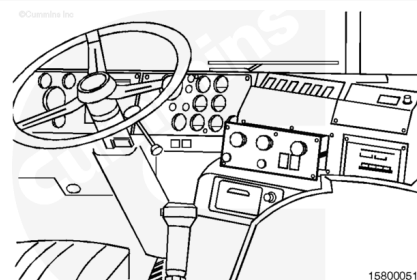

Install the parking brake switch into the tee fitting in the brake line, and then tighten the switch assembly nut to secure it into the fitting.

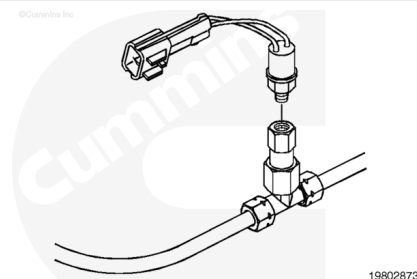

Connect the parking brake switch to the cab harness.

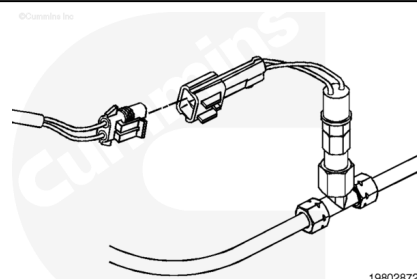

Install the dash panel that was previously removed to gain access to the parking brake switch.

