


Trainings ▾

Remove


Raise the cam follower assemblies, and use a wire to tie the cam followers up away from the camshaft.

Rotate the camshaft to align the holes in the camshaft gear with the thrust plate capscrews.

Remove the thrust plate capscrews.

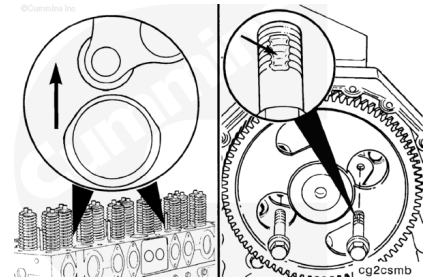


Remove the three capscrews and the camshaft rear cover plate.

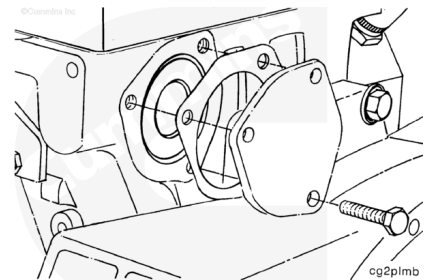


Install camshaft installation pilot, Part Number 3376388, as follows:

- Install the expander (1), Part Number 3376923, in the camshaft through the rear cover plate opening.
- Turn the screw inside the expander **clockwise** to expand the swell plug.

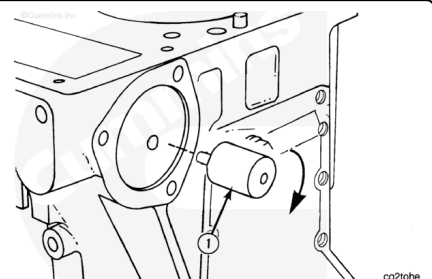

- Install the arbor sleeve (2) over the expander.
- Install the locating pilot extensions (3) to the expander.

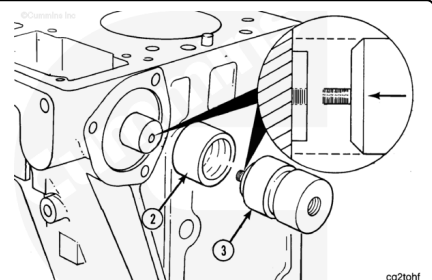

Use one hand to rotate slowly and pull the camshaft from the cylinder block and the other hand to balance the camshaft as it is removed.

Remove the camshaft pilot tool.

