


Fault Code: 346

Electronic Control Module (ECM) Powerdown Error

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 346 PID(P): S253 SPN: 630 FMI: 12 Lamp: Yellow SRT: 00-366	ECM powerdown internal data store error.	Powerdown data are lost. Powerdown data include maintenance monitoring, present ECM and engine delta times, and past fault data.

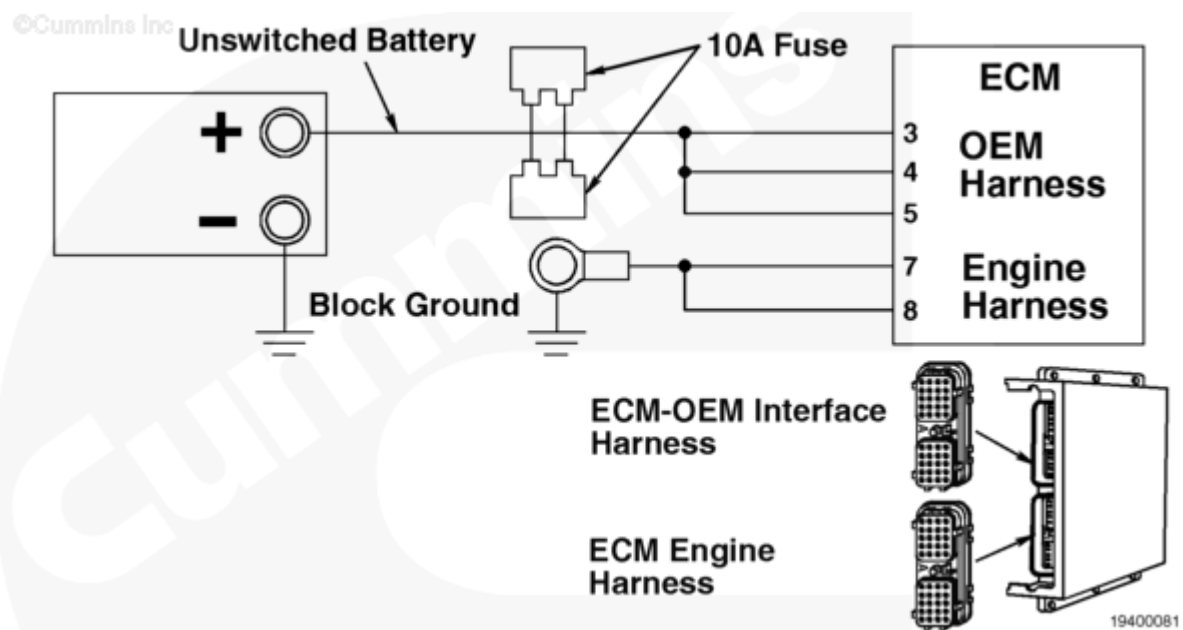

Battery Power and Ground Circuit

Circuit Description

The ECM is a computer that is responsible for engine control, diagnostics, and user features.

Component Location

The ECM is bolted to the control valve body on the left side of the engine.

Shoptalk

- This is a fault with the internal memory of the ECM. This fault can be caused by a power interruption to the ECM or a total loss of battery power.
- Fault Code 346 can be caused by **not** following the correct engine shutdown procedure. If a master disconnect switch is being used, you **must** turn the keyswitch OFF, wait 30 seconds, then disconnect the batteries using the master disconnect switch. If the operator does **not** wait 30 seconds before disconnecting the batteries, Fault Code 346 will be logged.
- If Fault Code 346 is active, turn the keyswitch ON, then turn it to OFF and wait 30 seconds. Repeat this step three times with a 30-second delay between each key cycle.

Refer to Troubleshooting Fault Code t05-346 (</qs3/pubsys2/xml/en/procedures/19/19-t05-346.html>)

Last Modified: 01-Mar-2011
