


Trainings ▾

Inspect for Reuse


Inspect the battery terminals for loose, broken, or corroded connections. Repair or replace broken cables or terminals.

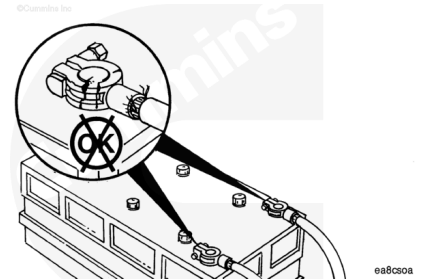

If the connections are corroded, remove the cables and use a battery brush to clean the cable and battery terminals.

⚠ WARNING ⚠

Always connect the negative (-) cable last to avoid sparks that can ignite explosive battery gases.

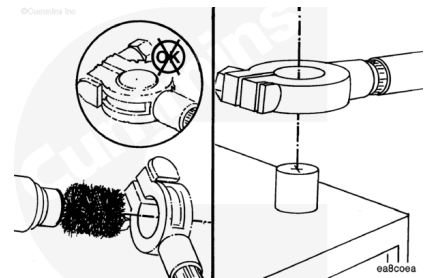

⚠ WARNING ⚠

Batteries emit hydrogen gas. To avoid explosion and personal injury, do not smoke or allow ignition sources in area when servicing batteries.

Connect and tighten the battery cables. Use grease to coat the battery terminals to prevent corrosion.