



Technical Service Bulletin

Technical Service Bulletin: TSB210248

Released Date: 08-Nov-2021

New Air Compressor

New Air Compressor

Warranty Statement

The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.

Contents

Product Affected

- KTA19 (All Versions)
- KTAA19 (All Versions)

Description of Change

- Current air compressor will be replaced with a pre-existing air compressor.
- This change will result in a slight change in tube routing because of differing placement of coolant ports.
- New option includes addition of inlet water tube.

Service Instructions

For field upfit, all parts within the corresponding new option shown below should be ordered.

Table 1, CP4074

Part Number	Quantity	Name
3090158	1	CONNECTOR,MALE
68152	1	CLIP
3081954	1	UNION,MALE
3090159	1	ELBOW,MALE UNION
4057970	1	TUBE,WATER OUTLET
43828 A	2	CLAMP,HOSE
4970037	1	HOSE,PLAIN
3010596	2	SCREW,CAPTIVE WASHER CA
3201388	1	GASKET,FLANGE
4057874	1	TUBE,AIR
69324	4	WASHER,PLAIN

Table 1, CP4074		
Part Number	Quantity	Name
199358	1	SLEEVE,SPLINE COUPLING
206402	4	SCREW,TWELVE POINT CAP
3069102	1	GASKET,AIR COMPRESSOR
207117	1	GASKET,AIR COMPRESSOR
3010596	2	SCREW,CAPTIVE WASHER CA
3049119	1	ELBOW,MALE UNION
3059308	1	UNION,MALE
4094838	1	HOSE,FLEXIBLE
4951905	1	CONNECTION,WATER TRANSF
S 604	3	WASHER,LOCK
205354	2	SCREW,TWELVE POINT CAP
554802	3	WASHER,PLAIN
3049333	1	SCREW,TWELVE POINT CAP
4967641	1	SUPPORT,AIR COMPRESSOR
4371593	1	COMPRESSOR,AIR
4089238	1	KIT,AIR COMPRESSOR GASK
4089675	1	PLUG,SOLID
4309439	1	KIT,AIR COMPRESSOR HEAD

Table 2, CP4085		
Part Number	Quantity	Name
3090158	1	CONNECTOR,MALE
68152	1	CLIP
3081954	1	UNION,MALE
3090159	1	ELBOW,MALE UNION
4057970	1	TUBE,WATER OUTLET
3010596	2	SCREW,CAPTIVE WASHER CA
3011693	1	PLATE,COVER
3201388	1	GASKET,FLANGE
69324	4	WASHER,PLAIN
199358	1	SLEEVE,SPLINE COUPLING
206402	4	SCREW,TWELVE POINT CAP
3069102	1	GASKET,AIR COMPRESSOR
207117	1	GASKET,AIR COMPRESSOR

Table 2, CP4085		
Part Number	Quantity	Name
3010596	2	SCREW,CAPTIVE WASHER CA
3049119	1	ELBOW,MALE UNION
3059308	1	UNION,MALE
4094838	1	HOSE,FLEXIBLE
4951905	1	CONNECTION,WATER TRANSF
S 604	3	WASHER,LOCK
205354	2	SCREW,TWELVE POINT CAP
554802	3	WASHER,PLAIN
3049333	1	SCREW,TWELVE POINT CAP
4967641	1	SUPPORT,AIR COMPRESSOR
4371593	1	COMPRESSOR,AIR
4089238	1	KIT,AIR COMPRESSOR GASK
4089675	1	PLUG,SOLID
4309439	1	KIT,AIR COMPRESSOR HEAD

Superseded Options:

CP4053, CP4054 (Figure 1 does **not** picture Air Supply Tube included in CP4054)



Figure 1, Representation Of Options CP4053 and CP4054 (without air supply tube).

New Options:

CP4074 (replaces CP4054)

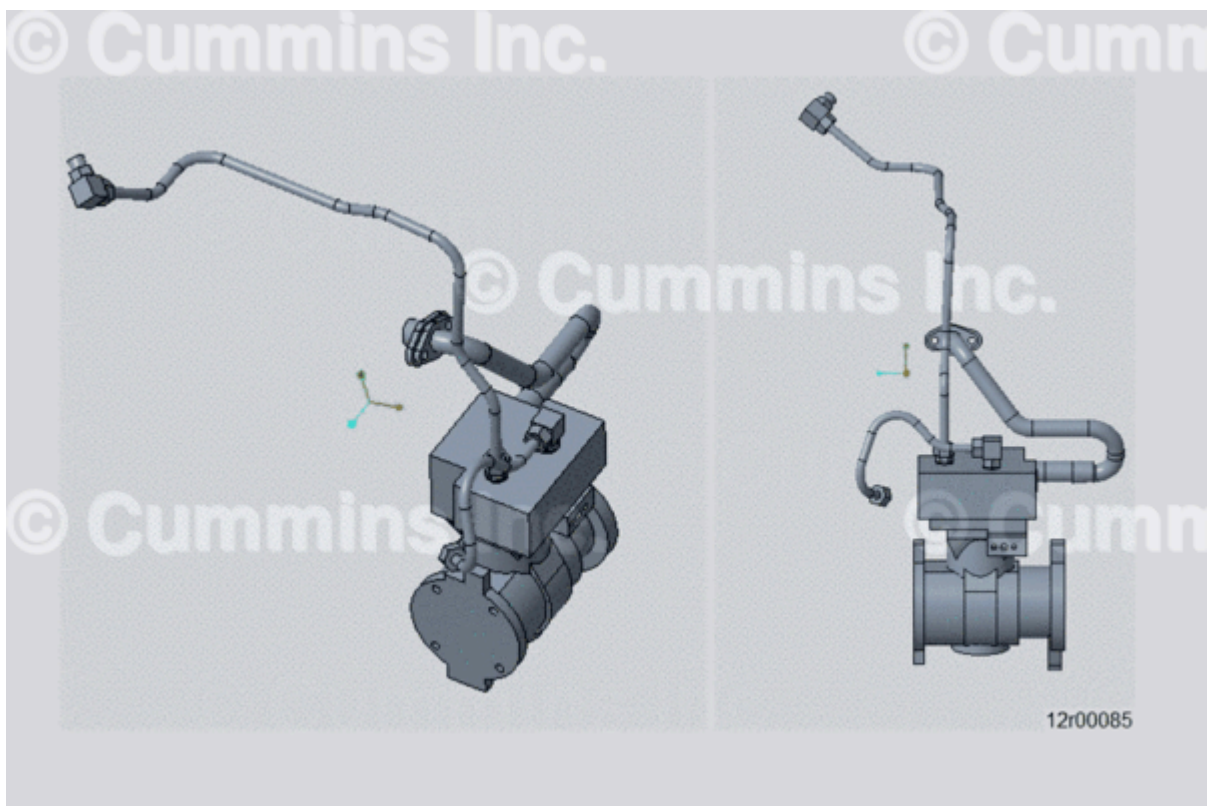


Figure 2, Representation of Option CP4074.

CP4085 (replaces CP4053)

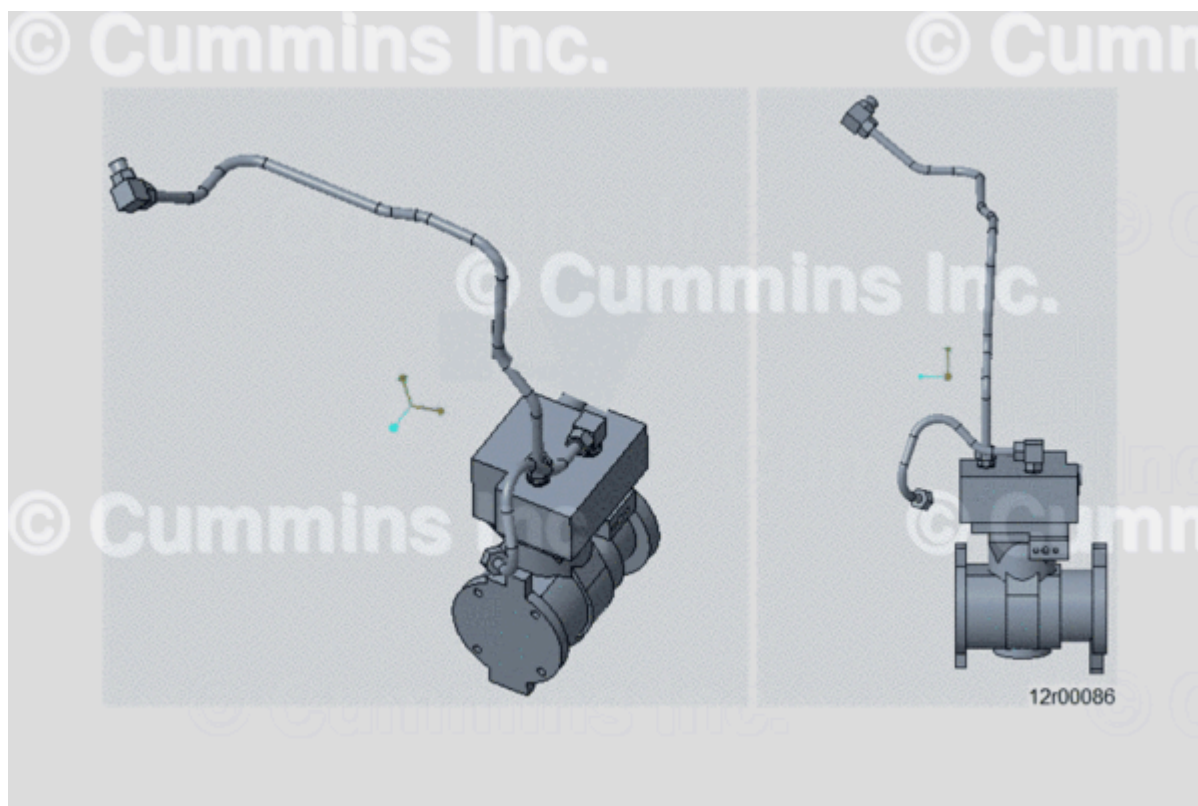


Figure 3, Representation of Option CP4085.

Service Parts Availability

Service parts are available. See Table 1 for part numbers.

Table 1, Service Parts

Part Description	Existing Part Number	Obsolete	Superseded	New Part Number
Air Compressor	3069211	No	Yes	4371593

Part Inventory Action

Use existing part number inventory before using the new part number.

Document History

Date	Details
2021-11-4	Module Created

