

Trainings ▾


Install

⚠ CAUTION ⚠

Do not bend or kink hose while tightening. Doing so can possibly damage line.

⚠ CAUTION ⚠

Check the face of oil supply fitting on engine and on turbocharger to ensure o-ring is in place and is not damaged. A damaged or missing o-ring will result in an oil leak.

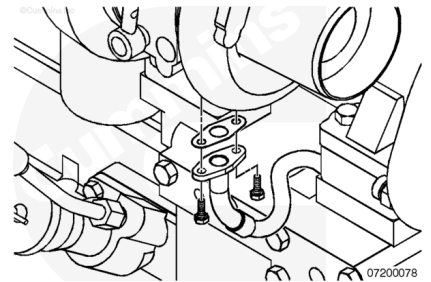

Use a second wrench to hold the oil drain line coupling while tightening line.

Connect the bottom of drain tube to the block.

Install the turbocharger oil drain line with a new gasket.

Torque Value: 20 n•m [177 in-lb]