


Trainings ▾

Remove

Note : As the electric fan clutch mounting fastener is loosened, make sure to support the clutch.

Note : The electric fan clutch mounting capscrew has an external Torx™ head.

Remove the electric fan clutch mounting capscrew, washer and electric fan clutch.

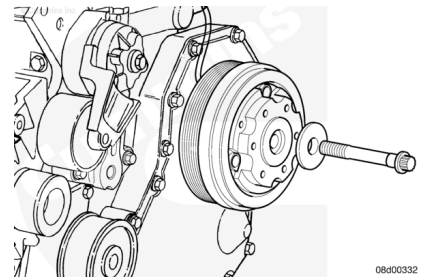

Note : Prior to removing the electric fan clutch support bracket, note the mounting location and orientation of the bracket. The mounting bracket can be installed in different orientations for different fan drive arrangements.

Note : Note the location of the P-clip for the electric fan clutch wiring harness pigtail.

Remove the electric fan clutch support bracket and mounting capscrews.

