


Trainings ▾

Remove

The voltage regulator is mounted in the controls box.


Installation can vary.

Disconnect the 6-pin AMP connector 10 on the AC harness from the voltage regulator.

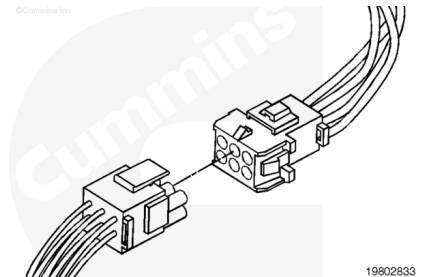

Disconnect the 6-pin Deutsch connector 07 on the generator control harness from the voltage regulator.


Remove the four capscrews that hold the voltage regulator to the controls box.

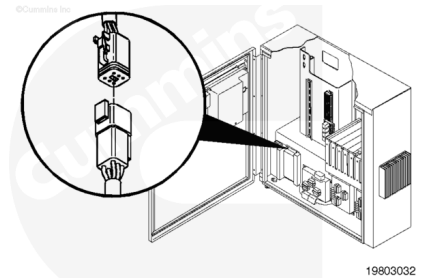


Install

Install the new voltage regulator in the controls box. Tighten the four capscrews.

Connect the 6-pin Deutsch connector 07 on the generator control harness to the voltage regulator.

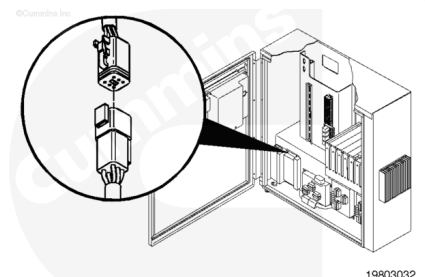

Connect the 6-pin AMP connector 10 on the AC harness to the voltage regulator.

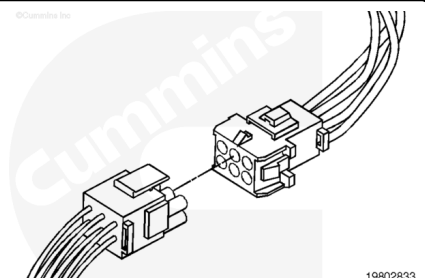

Last Modified: 30-Jun-2003