

Fault Code: 1344


Generator Interface Board - Incorrect Installation

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1344 PID(P): SPN: FMI: Lamp: Shutdown SRT:	The generator interface board(slot 2) is missing or has not been installed correctly.	Engine will not start.

©Cummins Inc

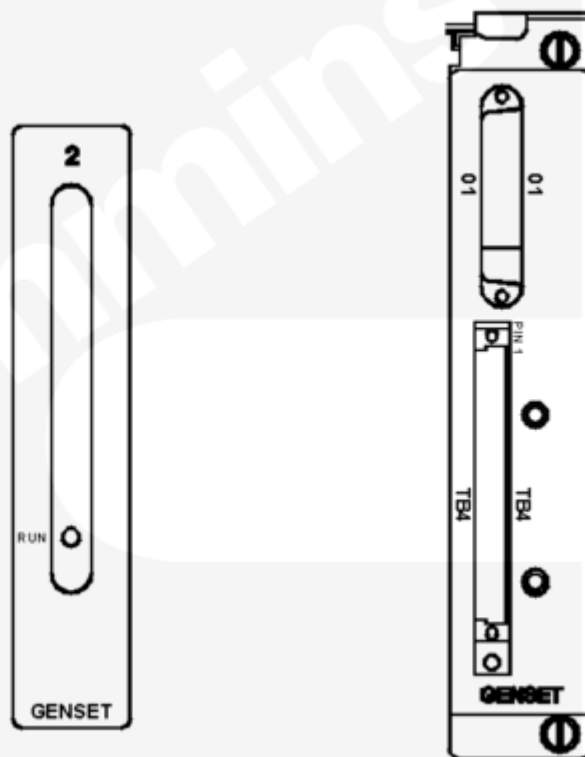

19802790

Generator Set ECM Generator Interface Board

Circuit Description

Once the software has been loaded into the ECM, the software will do a hardware check to make sure that all necessary cards are installed for the application.

This fault code is used by the ECM to tell the operator that the generator interface board (slot 2) is missing or has been installed incorrectly.

Component Location

Refer to Section E for location of the ECM card cage and the generator interface board (slot 2).

Shoptalk

The possible failure modes are incorrect installation of the generator interface board and loading an incorrect software calibration into the ECM.

Refer to Troubleshooting Fault Code t05-1344 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1344.html>)

Last Modified: 29-Jul-2010
