

Fault Code: 1348


Slot 6 Board - Incorrect Installation

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1348 PID(P): SPN: FMI: Lamp: Shutdown SRT:	The slot 6 board is missing or has not been installed correctly.	Engine will not start.

©Cummins Inc

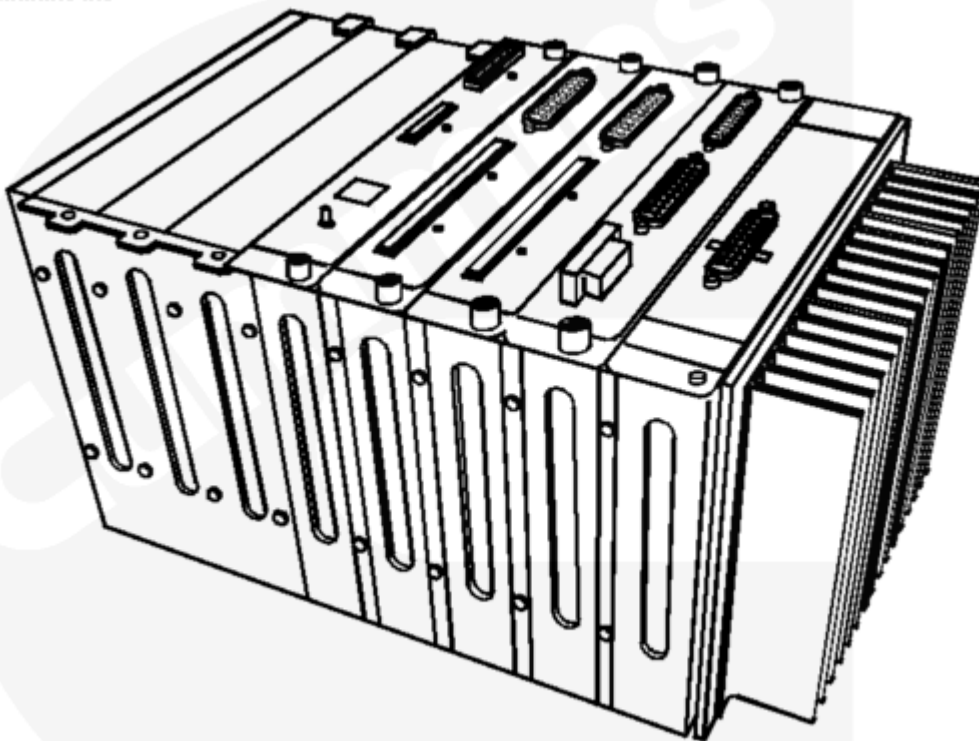

19802649

Generator Set ECM Card Cage

Circuit Description

Once the software has been loaded into the ECM, the software will do a hardware check to make sure that all necessary cards are installed for the application.

This fault code is used by the ECM to tell the operator that the slot 6 board is missing or has been installed incorrectly.

Component Location

Refer to Section E for location of the ECM card cage and the slot 6 board.

Shoptalk

The possible failure modes are incorrect installation of the slot 6 board and loading an incorrect software calibration into the ECM.

Refer to Troubleshooting Fault Code t05-1348 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1348.html>)

Last Modified: 29-Jul-2010
