

Fault Code: 1448


Generator AC Output Frequency - High

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1448 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Generator AC output frequency is low.	Generator set will shut down.

©Cummins Inc

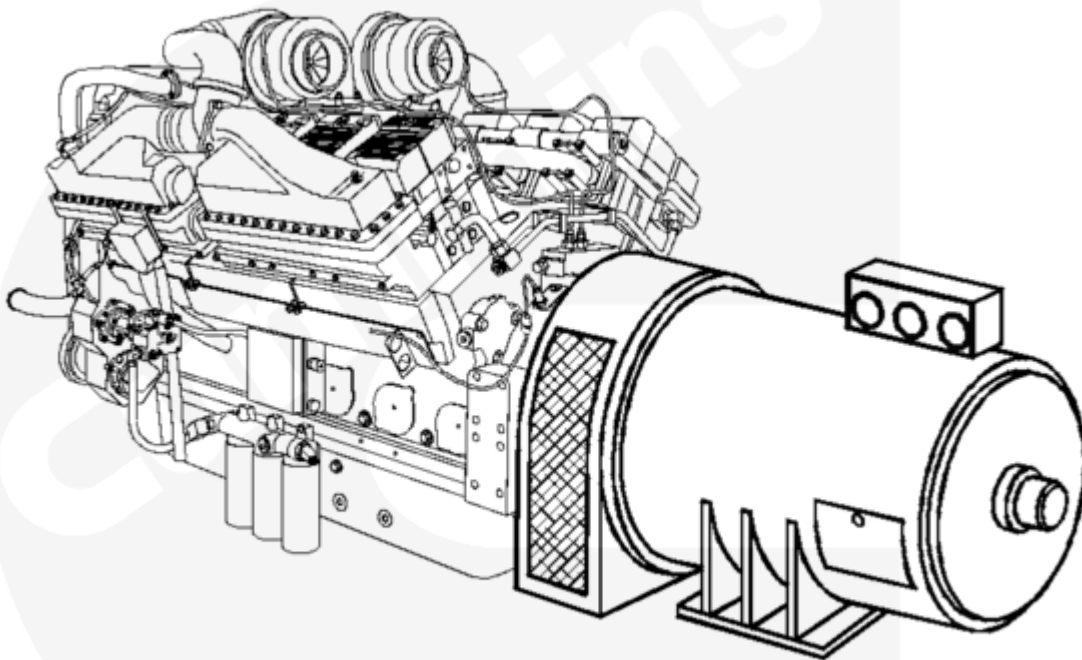

17600025

Generator Set

Circuit Description

The generator set produces electrical power. This power is in the form of three-phase AC. The ECM monitors the performance and operation of the generator set. The threshold for a low AC output frequency condition is that the engine speed has dropped below 90 percent of nominal for at least 10 seconds.

The engine control module (ECM) uses this fault code to tell the operator when the generator set AC output frequency is low.

Component Location

Refer to customer/facility/installation documentation for diagrams on the generator set/electrical bus setup.

Shoptalk

Check the fuel supply, intake air supply, and load.

Refer to Troubleshooting Fault Code t05-1448. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1448.html>)

Last Modified: 08-May-2012
