


Fault Code: 1469

Generator Set Measured Speed and AC Output Frequency Conflict - Condition Exists

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1469 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Generator measured speed and measured AC output frequency do not agree.	Generator set will shut down.

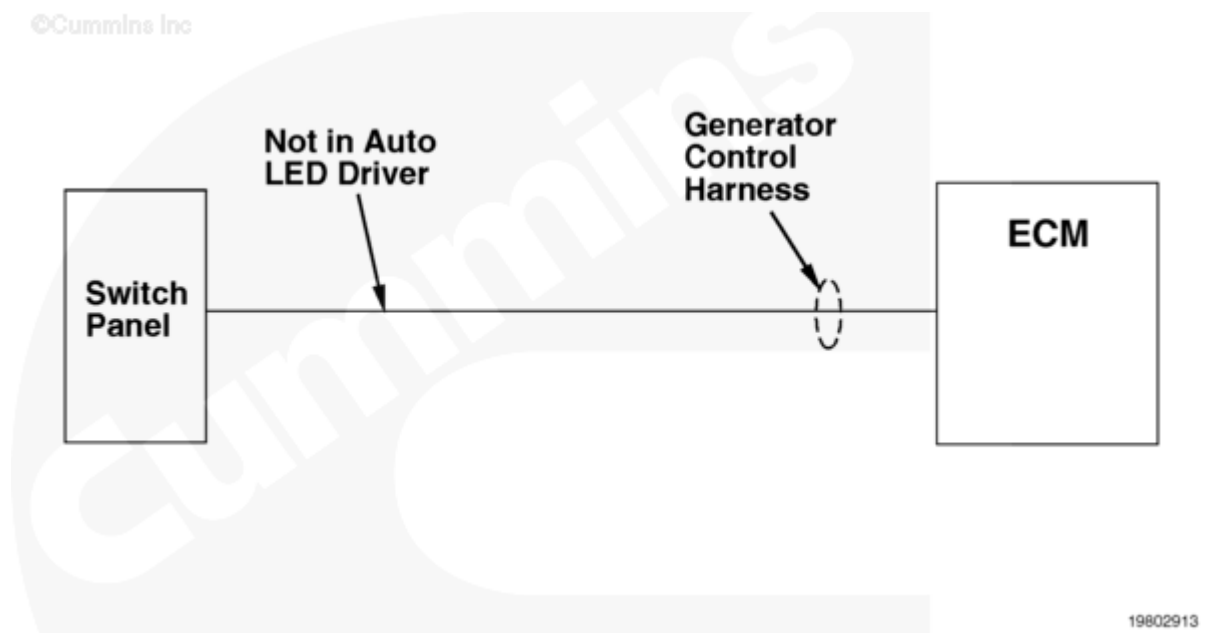

Generator Circuit

Circuit Description

The generator set monitors engine speed and AC output frequency. The AC output frequency is dependent on the engine speed. Therefore, if the engine speed does **not** match what the AC output frequency would expect, the engine control module (ECM) will make this fault code active.

Component Location

Reference Section E for location of the engine speed sensor and the PT/CT board.

Reference customer/facility/installation documentation for the location of the generator set circuit breaker and interface with the electric bus.

Shoptalk

This fault code could be caused by a faulty PT/CT board, a problem with the engine speed sensor circuit, and a problem with the generator control harness.

Refer to Troubleshooting Fault Code t05-1469. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1469.html>)

Last Modified: 08-May-2012
