


Fault Code: 2114

Aftercooler Water Inlet Temperature High - Critical

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 2114 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Engine coolant temperature 2 high - critical. Voltage signal indicates aftercooler water inlet temperature has exceeded the shutdown threshold for high aftercooler water inlet temperature.	Engine will shut down.

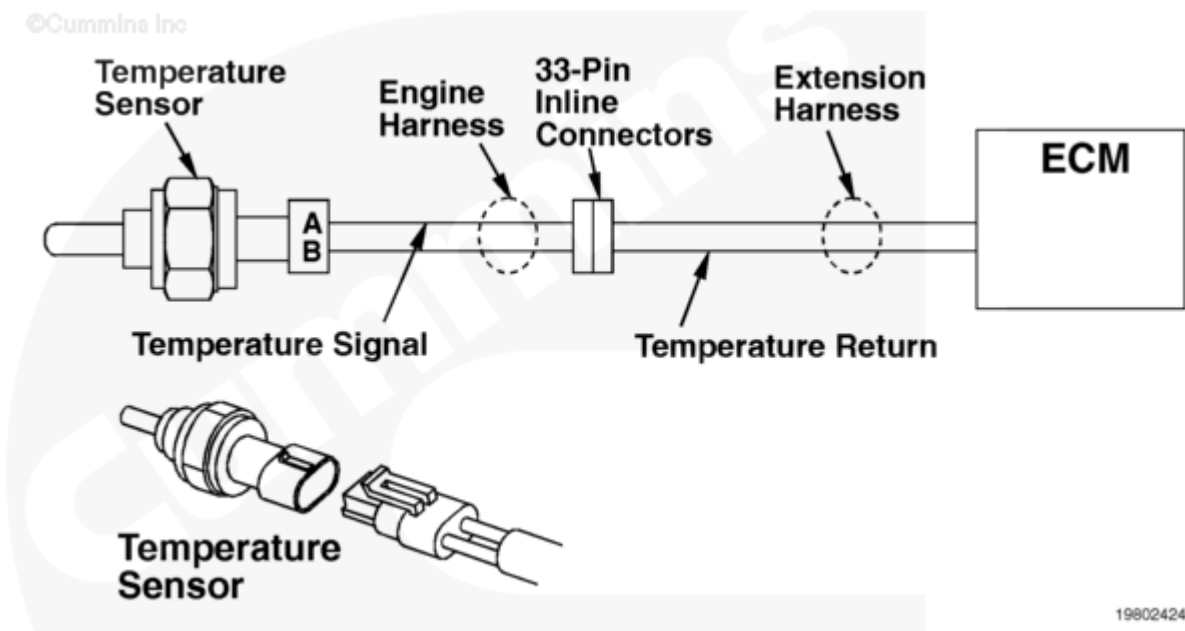

Aftercooler Water Inlet Temperature Sensor Circuit

Circuit Description

The aftercooler water inlet temperature sensor is used by the electronic control module (ECM) to monitor the ability of the engine cooling system to cool down the engine coolant. The aftercooler water inlet temperature value is used by the ECM for the engine protection system. The ECM monitors the voltage on the aftercooler water inlet temperature signal pin and expects to see a voltage vary between 0.5 and 4.5 VDC during normal engine operation.

Component Location

Refer to Procedure 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

Shoptalk

Make sure that the water inlet flow is **not** restricted. The resistance of the sensor varies with the temperature.

Refer to Troubleshooting Fault Code t05-2114 (</qs3/pubsys2/xml/en/procedures/01/01-t05-2114.html>)

Last Modified: 29-Jul-2010
