



Technical Service Bulletin

Technical Service Bulletin: tsb100626

Released Date: 03-Dec-2007

New Harness Mounted Ambient Air Pressure Sensor

New Harness Mounted Ambient Air Pressure Sensor

Warranty Statement

The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.

Contents

This Technical Service Bulletin announces the release of the harness mounted ambient air pressure sensor on heavy duty engines for production and service.

The engines affected by this change are the ISX CM570, QSX15 CM570, ISM CM570, and the QSM11 CM570.


When replacing the complete main engine harness on heavy duty engines, there will **not** be a connector on the harness that connects to the old style engine mounted ambient air/barometric pressure sensor. The new engine harness will come with a new ambient air/barometric pressure sensor already attached to the new harness. The old style engine mounted sensor will **not** be used and can be removed and discarded.

New Harness Mounted Ambient Air Pressure Sensor Part Numbers


Engine	Old Part Number	New Part Number	Engine Serial Number First (ESN)
ISX, QSX15, QSX15 G-drive (CM570)	4923977	4952742	Not captured
ISM, QSM11 (CM570)	4083250	4952744	Not captured
ISM, QSM11(CM570)	4059814	4952746	35152070
ISM (CM570)	4059812	4952748	35154574
ISM, QSM11 (CM570)	4059810	4952750	35149637
ISM, QSM11 (CM570)	4004501	4952752	35148571
QSX15 G-drive (CM570)	3102730	4952754	Not captured
QSM11 (CM570)	3349774	4936905	Not captured

New Harness Mounted Ambient Air Pressure Sensor Part Numbers			
Engine	Old Part Number	New Part Number	Engine Serial Number First (ESN)
Note: All old part numbers have been obsoleted.			

- Old Style Sensor

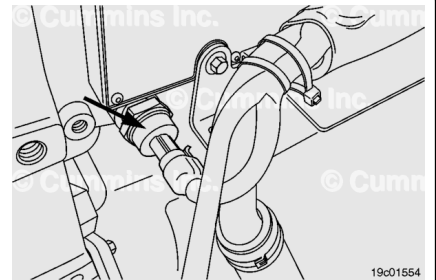

- Old Style Mounting Location and New Style Mounting Location

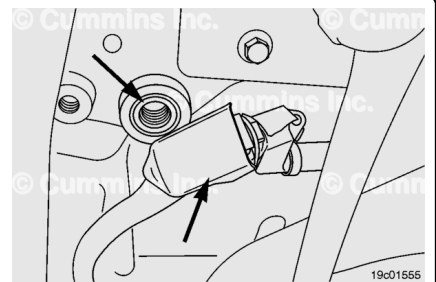

- New Style Harness Mounted Sensor

