



Technical Service Bulletin

Technical Service Bulletin: TSB110040

Released Date: 22-Feb-2011

New Composite Air Compressor Cover

New Composite Air Compressor Cover

Warranty Statement

The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.

Contents

The purpose of this document is to announce the release of a new composite air compressor cover applicable to air compressor options CP 9517, CP 9571, CP 9703, HD 9380, HD 9217, and HD 9711. The new cover replaces the existing aluminum cover and requires different retaining fasteners. The existing aluminum cover and 12 point capscrews have been superseded with the new composite cover and flange head capscrews. The fasteners required for each cover type can **not** be interchanged. The same radial seal is used with both types of cover. The table below contains the required part numbers for each cover type. Figures 1 and 2 illustrate the details of the changes.

Description	Existing Aluminum Compressor Cover	New Composite Compressor Cover
Capscrew	3278448	3093932
Cover, air compressor	3906284	5271160
Seal, radial	3906285	3906285

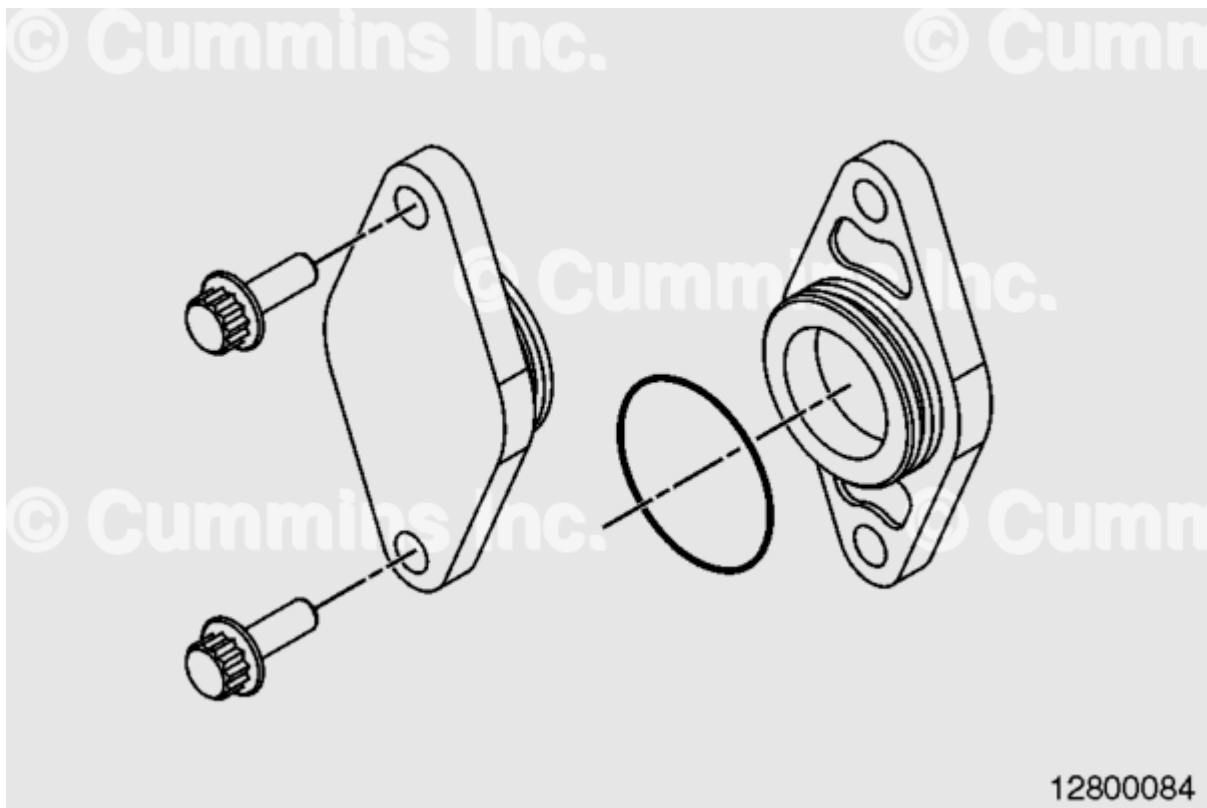


Figure 1. Existing Aluminum Compressor Cover with 12 Point Capscrews

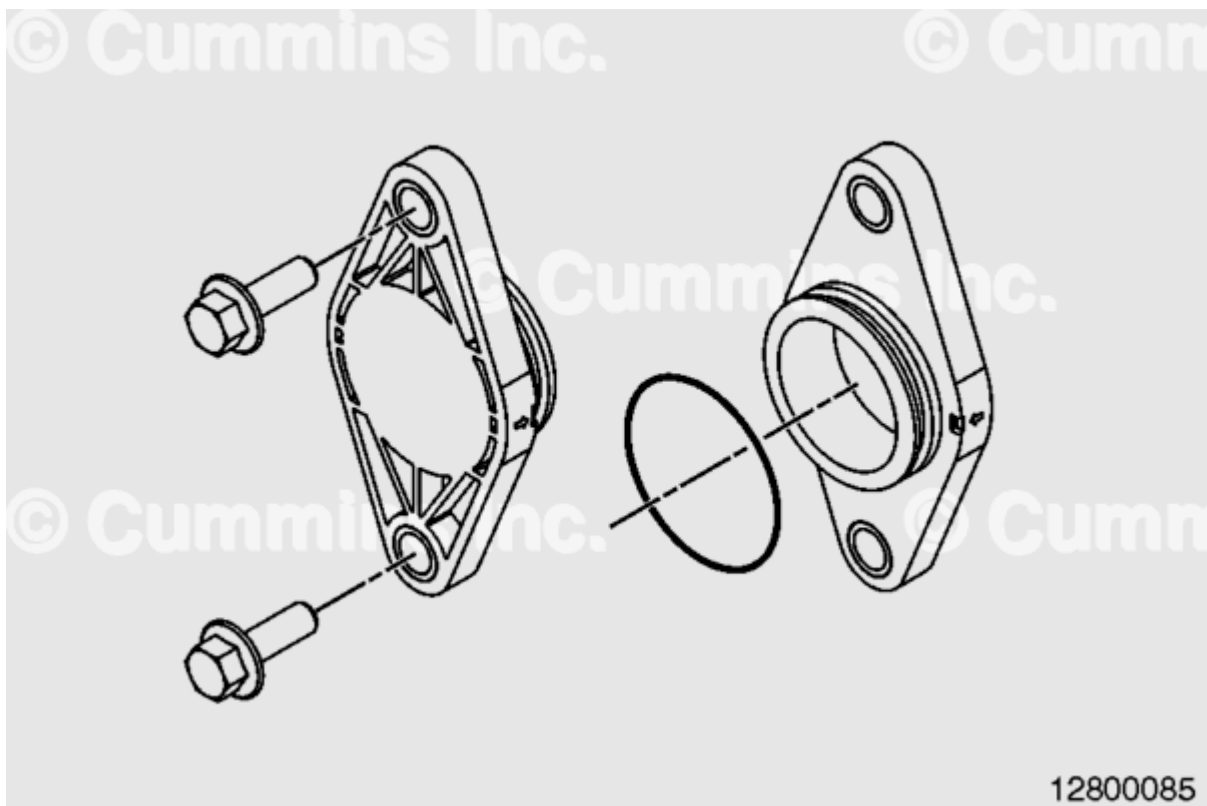


Figure 2. New Composite Compressor Cover with Flange Head Capscrews

Date	Details
2011-2-9	Module Created

Last Modified: 22-Feb-2011
